



9666 E Riggs Rd Suite 116 · Sun Lakes, AZ 85248 · (480) 895-4241
(Next to TruValue)

General Laminate Floor Care

Spray Endust on bottom of a dust mop and dust floor as needed.

Place mats outside entrances for people to wipe their feet on as small stones can scratch laminate floors.

Light damp mop with Mohawk Hard Surface Cleaner as needed.

Avoid standing water as this may cause the seams between the planks to swell.

Don't use oil soaps or pledge on floor.

Never wax a laminate floor.

Wipe spills immediately.

If leaving home empty for summer, the thermostat must be left no higher than 85° F. Superheating a laminate floor will cause it to expand and contract, which voids the warranty.